

OPERATING **INSTRUCTIONS**

Microwave Oven

NN-6808/NN-6858/NN-6568

NN-6558/NN-6308/NN-6358/NN-6258

This appliance was produced to BS 800: 1983.

Panasonic

Before operating this oven, please read these instructions carefully.

Installation

Examine Your Oven

Unpack oven, remove all packing material, and examine the oven for any damage such as dents, broken door latches or cracks in the door. Notify dealer immediately if unit is damaged. Do NOT install if unit is damaged.

Guarantee Card

Fill out and post the pre-addressed guarantee card.

Earthing Instructions

IMPORTANT FOR PERSONAL SAFETY, THIS APPLIANCE MUST BE PROPERLY EARTHED. When a wall socket is not earthed, it is the personal responsibility and obligation of the customer to have it replaced with a properly earthed wall socket.

WARNING:

THIS APPLIANCE MUST BE EARTHED.

IMPORTANT:

The wires in this mains lead are coloured in accordance with the following code:

Green-and-yellow:	Earth
Blue:	Neutral
Brown:	Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The wire which is coloured GREEN-and-YELLOW must be connected to the terminal in the plug which is marked with the letter E or by the safety earth symbol or coloured GREEN or GREEN-and-YELLOW. The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.

Voltage and Power Warning

The voltage used must be the same as specified on this microwave oven. Using a higher voltage than that which is specified is dangerous, and may result in a fire or other type of accident causing damage.
N.B. 13 amp fuse required in plug.

Placement of Oven

1. Oven must be placed on a flat, stable surface. For proper operation, the oven must have sufficient air flow.
2. Do not block air vents on the rear and bottom of the cabinet. Do not place any articles on the top of the oven. If air vents are blocked during operation, the oven may overheat. If the oven overheats, a thermal safety device will turn the oven off. The oven will remain inoperable with blank display until it has cooled.
3. Do not place the microwave oven on a shelf directly above a gas or electric hob. Otherwise the oven may be damaged.
4. Do not allow mains cable to touch cabinet surface.
5. This oven was manufactured for domestic use only.

Built In

1. In case of fitting into an oven housing, please use Panasonic's Trim Kit NN-TK608 (for NN-6808/6308), NN-TK658 (for NN-6858/6558/6358/6258), NN-TK688 (for NN-6568) referring to the Trim Kit's Instruction Manual for details.
2. Microwave ovens should not be built into a unit directly above a top front venting conventional cooker. A gap of at least 15 cm (6 inches) should be left. It is important that the microwave draws in cool air. A microwave which is built under a work surface must have adequate air circulation and must have a vent in the work surface.

Caution Points

1. Do not operate this appliance if it has a damaged CORD OR PLUG, if it is not working properly, or if it has been damaged or dropped.
2. This appliance including the oven lamp should be serviced only by service technician trained by the manufacturer.
3. Do not use outdoors.
4. Do not immerse cord, plug or oven in water.
5. Keep cord away from heated surfaces.
6. Do not let cord hang over the edge of table or counter.
7. Do not attempt to tamper with or make any adjustments or repairs to door, control panel housing, safety interlocks switches or any other part of the oven. Do not remove outer panel from oven. Repairs should only be done by a qualified service person.
8. The door seals and door seal areas should be cleaned with a damp cloth.
9. The appliance should be inspected for damage to the door seals and door seal areas and if these areas are damaged the appliance should not be operated until it has been repaired by service technician trained by the manufacturer.
10. It is dangerous for anyone other than a service technician trained by the manufacturer to perform repair service.
11. The appliance shall not be operated without food in the oven, operation in this manner being likely to damage the appliance.

General Information

1) Cooking Times

Food:

- As microwave cooking times are much shorter than other cooking methods it is essential that recommended cooking times are not exceeded without first checking the food.
- Cooking times given in the cookbook are approximate. Factors that may affect cooking times are: preferred degree of cooking, starting temperature, altitude, volume, size and shape of foods and utensils used. As you become familiar with the oven, you will be able to adjust these factors.
- It is better to undercook rather than overcook foods. If food is undercooked, it can always be returned to the oven for further cooking. If food is overcooked, nothing can be done. Always start with minimum cooking times.

Important

If the recommended cooking times are exceeded the food will be spoiled and in extreme circumstances could catch fire and possibly damage the interior of the oven.

- Particular attention should be paid to heating small quantities of food and items such as jacket potatoes and Christmas puddings.

2) Small Quantities of Foods

- Small quantities of food or foods with low moisture content can burn, dry out or catch on fire if cooked too long. If materials inside the oven should ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.

3) Christmas Puddings

- It is important to correctly set the cooking time for puddings such as Christmas Pudding which has a high fat and sugar content. If the pudding is heated for too long, it can ignite.

4) Eggs

- Do not boil eggs in their shell. Pressure may build up and the eggs will explode.

5) Piercing Skin

- Potatoes, apples, egg yolks, whole vegetables and sausages are examples of food with non porous skins. These must be pierced using a fork before cooking to prevent bursting.

6) Deep Fat Frying

- Do not attempt to deep fat fry in your oven.

7) Meat Thermometer

- Use a meat thermometer to check the degree of cooking of roasts and poultry only when meats has been removed. If undercooked, return to oven and cook a few more minutes at the recommended power level. Do not use a conventional meat thermometer in the microwave oven. (See your cookbook for further information).

8) Liquids

- Heated liquid can erupt if not mixed with air. Do not heat liquid in your microwave oven without first stirring.

9) Paper, Plastic

- Carefully attend the appliance if paper, plastic or other combustible materials are placed inside the oven to facilitate cooking.
- Remove wire twist-ties from roasting bags before placing bag in oven.
- Do not use re-cycled paper products, as they may contain impurities which may cause sparks and/or fires when used.

Glass Tray

1. Do not operate the oven without the Roller Ring, and Glass Tray in place.
2. Only use the Glass Tray specifically designed for this oven. Do not substitute any other Glass Tray.
3. If Glass Tray is hot, allow to cool before cleaning or placing in water.
4. Turntable can turn in either direction.
5. If food or utensil on Glass Tray touches oven walls, causing the turntable to stop moving, the turntable may rotate in opposite direction. This is normal. Open oven door and reposition food.
6. Do NOT cook directly on Glass Tray. Always place food in a dish, on a rack set in a dish, or on paper towels. The only exception to this is cooking Jacket Potatoes.

 
Roller Ring

1. The Roller Ring and oven floor should be cleaned frequently to prevent excessive noise.
2. The Roller Ring must always be used for cooking together with the Glass Tray.

Oven Light

When it becomes necessary to replace the oven light, please consult a dealer to have it replaced.

Outline Diagram

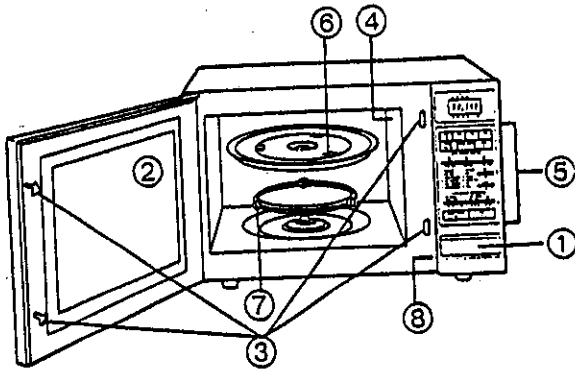


- ① Door Release Button
- ② Oven Window
- ③ Door Safety Lock System
- ④ Oven Air Vent
- ⑤ Control Panel
- ⑥ Glass Tray
- ⑦ Roller Ring
- ⑧ Name Plate

Control Panel


Controls with Auto Count-Up Feature*

 NN-6808/NN-6858

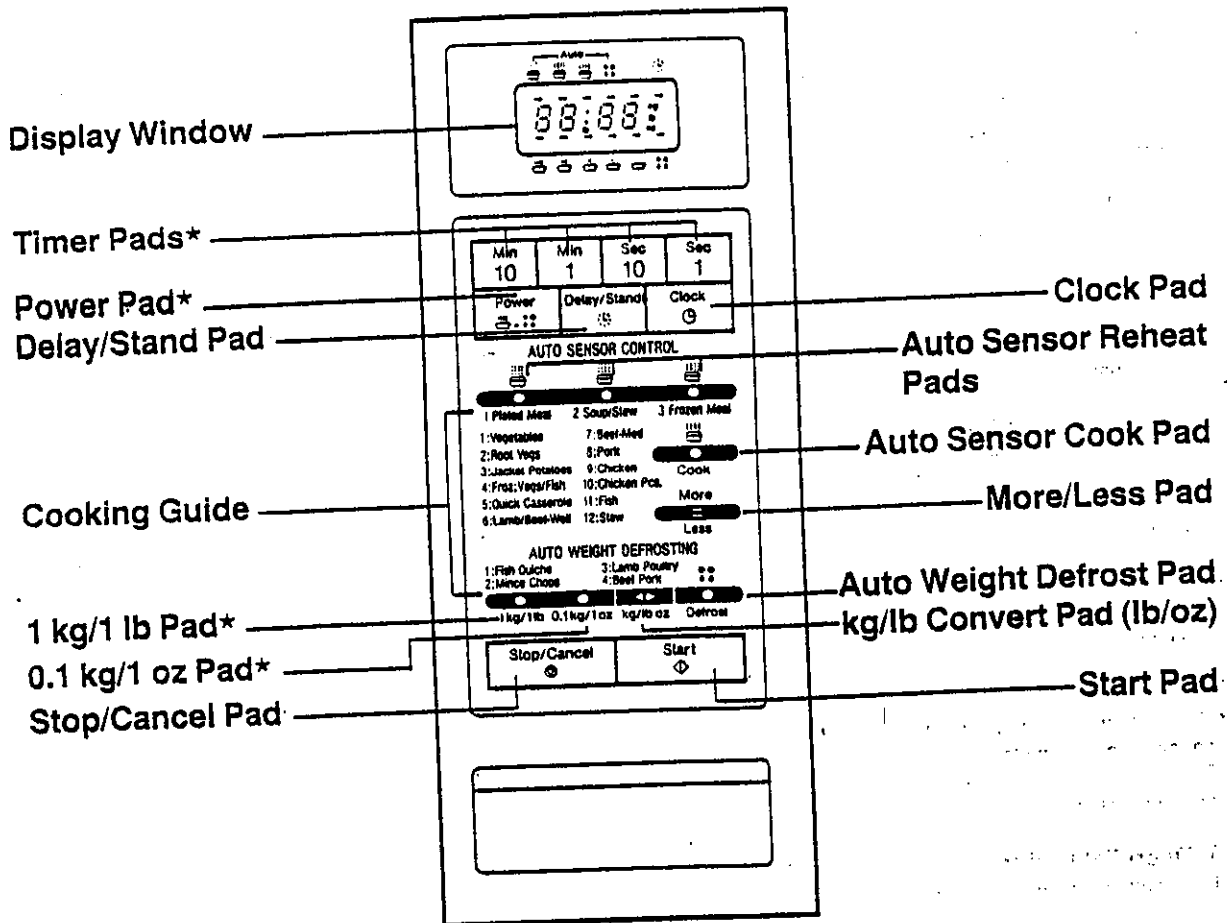


Control Panel

 
NN-6568/6558

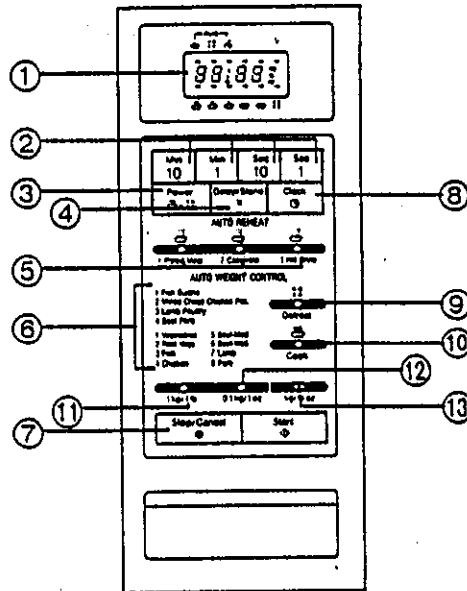

NN-6308/NN-6358

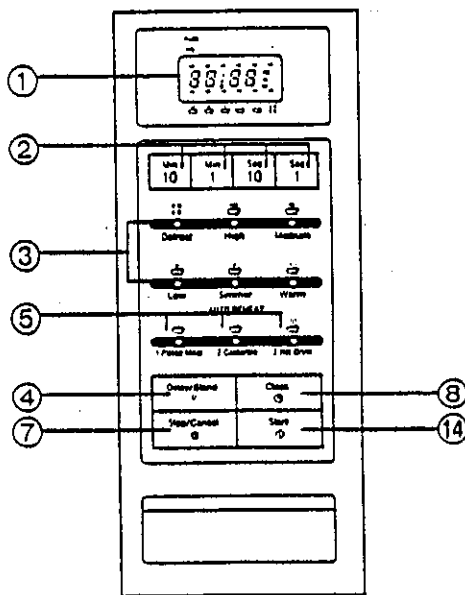 

NN-6258

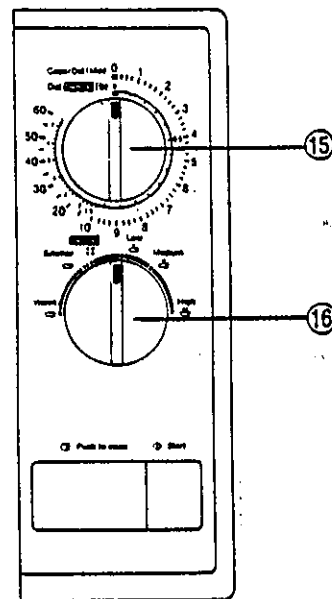 

Controls with Auto Count-Up Feature*

- | | | |
|-----------------------------|---------------------------|-----------------------------|
| ① Display Window | ⑥ Cooking Guide | ⑪ 1 kg/1 lb Pad* |
| ② Time Pads* | ⑦ Stop/Cancel Pad | ⑫ 0.1 kg/1 oz Pad* |
| ③ Power Pad* | ⑧ Clock Pad | ⑬ kg/lb Convert Pad (lb/oz) |
| ④ Delay/Stand Pad | ⑨ Auto Weight Defrost Pad | ⑭ Start Pad |
| ⑤ Auto Reheat Control Pads* | ⑩ Auto Weight Cook Pad* | ⑮ Timer |
| | | ⑯ Power Select Control |

Controls and Operation Procedure

(NN-6808/NN-6858/NN-6568/NN-6558/NN-6308/NN-6358)

 
Setting The Clock

When oven is first plugged in, "88:88" will appear in the display window.

To set clock

Step 1. Press the CLOCK Pad.

► The colon will start to blink.

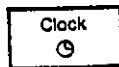


Step 2. Enter time of day by pressing appropriate TIME Pads.

► Time appears in display window; colon is blinking.

Example: To set 11:25,

 touch TIME Pads from left to right as follows:

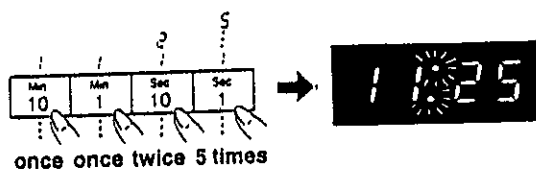

once once twice 5 times

Step 3. Touch CLOCK Pad.

► Colon stops blinking; time of day is entered and locked into display.

NOTES ON CLOCK:

1. To reset time of day, repeat Step 1 through Step 3.
2. The clock will keep the time of day as long as oven is plugged in and electricity is supplied.
3. To delete "88:88" indication, touch STOP/RESET Pad.
4. This is a 12 hour clock, not a 24 hour clock.

Door Opener Button:

Opening Door:

 
Opening the door during cooking will stop the cooking process without cancelling the programme. Cooking resumes as soon as the door is closed and START Pad is touched. The oven light will stay on or turn on whenever the door is opened.

Beep Sound:

When a pad is touched correctly, a beep will be heard. If a pad is touched and no beep is heard, the unit has not or cannot accept the instruction. The oven will beep twice between programmed stages. At the end of any complete program, the oven will beep 5 times.


START Pad:

One tap allows oven to begin functioning. If door is opened or STOP/CANCEL Pad is tapped once during oven operation, START Pad must again be touched to restart oven.

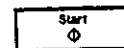

STOP/CANCEL Pad:

 Before cooking: One tap clears your instructions.
During cooking: One tap temporarily stops the cooking process. Another tap cancels all your instructions and time of day appears in display window.

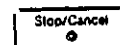

Kg/lb Convert Pad:

When you select some category from Auto Weight Control, kg indication will appear. If you tap Convert Pad, indication lights



change to lb. oz.
NOTE: The kg/lb Convert Pad can't work once weight is set in kilogrammes or pounds.

Manual Cooking Procedure

Selecting Power Level:

Automatically counts down from HIGH to WARM. The following is the approximate wattage for each power level.



0#	HIGH power	700 W
0#	MEDIUM power	480 W
::	DEFROST power	240 W
0-	LOW power	360 W
0-	SIMMER power	180 W
0	WARM power	70 W

NB: For model NN-6308/NN-6358
To Set the Power level, touch the desired cooking POWER Pad from HIGH to WARM.

Selecting Time:

TIME Pad:

The Pads serve as a 10 minute pad, 1 minute pad, 10 second pad and 1 second pad from the left, and can be programmed up to 99 minutes and 99 seconds.

Min	Min	Sec	Sec
10	1	10	1

Example 1: To set 13 minutes 45 seconds

Touch:

 
- 10 MIN Pad: once
- 1 MIN Pad: 3 times
- 10 SEC Pad: 4 times
- 1 SEC Pad: 5 times




Always select the power level before selecting the time.

NB: For model NN-6258


Cooking time is selected by turning the rotary dial control to the desired heating time.

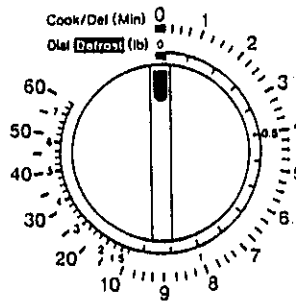


One Stage Cooking

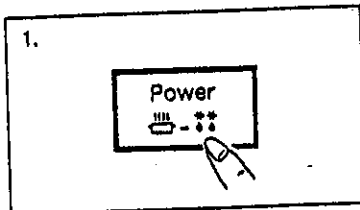 

 • Select cooking power by pressing POWER Pad.

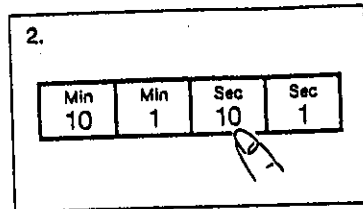


 • Set cooking time by pressing TIME Pads.

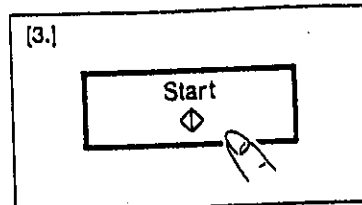


• Touch START Pad.

 
Two Stage Cooking/Three Stage Cooking

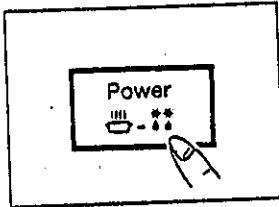

 
• Before touching START Pad, select 1st cooking power by pressing POWER Pad.

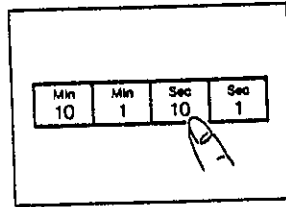

 • Set 1st stage cooking time by pressing TIME Pads.

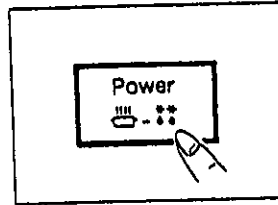


 • Set 2nd power level by pressing POWER Pad.

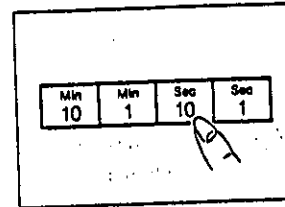

• Set 2nd cooking time by pressing TIME Pads.

 (If required set third power level and third cooking time).
then

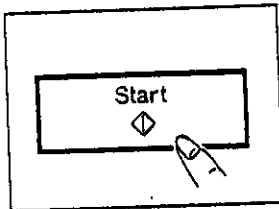

• Touch START Pad.

NB. For model NN-6308/6358 only two stage cooking is possible.

Example of two stage cooking:

Vegetable soup—High 10 mins to bring soup to boil.

 
Simmer 30 mins to cook vegetables.

Casserole—High 10 mins to bring casserole to boil. Simmer 60 mins to cook.


Warm 10 mins to allow flavours to continue blending.

Delay Start


This feature allows you to program a Delay Start.

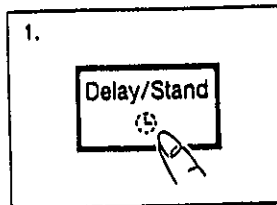


• Touch DELAY/STAND Pad.

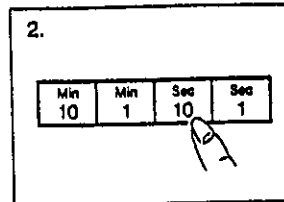 

 • Set the time you want to delay the oven to begin cooking by pressing TIME Pads.

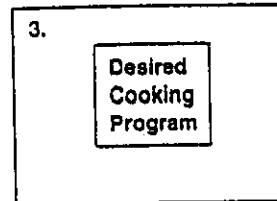

 • Program desired cooking according to directions already given in this manual.

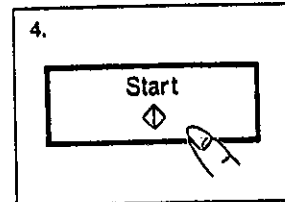

• Touch START Pad.

NOTES ON DELAY START:

1. With the Delay Start feature, the oven may be programmed to delay cooking up to 9 hours 99 minutes before cooking starts.

NB


Min 10	Min 1	Sec 10	Sec 1
hours	"H"	"10's mins	"1's" mins

2. Three stage cooking can be programmed including Delay Start.


ex. Delay Start 1 hour
High Power 10 min.
Simmer Power 20 min.

Stand Time

 
This feature allows you to program a Stand Time after cooking is completed and to program the oven as a minute timer or/and delay start.

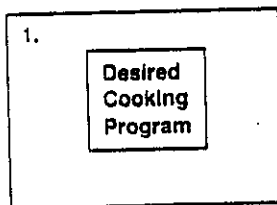

 
• Program desired cooking program according to directions already given in this manual.

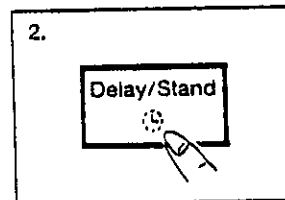

• Touch DELAY/STAND Pad.

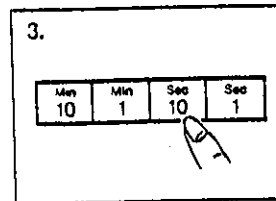 

 • Set desired amount of time by pressing TIME Pads.

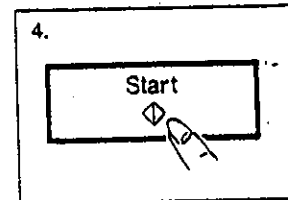

• Touch START Pad.

NOTE ON STAND TIME:

1. With the Stand Time feature, the oven may be programmed to stand for up to 9 hours 99 minutes before or during a cooking sequence.

NB

Min 10	Min 1	Sec 10	Sec 1
hours	"H"	"10's mins	"1's" mins

 
2. Three stage cooking can be programmed. One of these stages can be a Stand Time.

ex. Cooking Christmas Pudding (21 lb) High Power 4 min.
Stand Time 5 min.
High Power 2 min.


3. If oven door is opened during the Stand Time, the time in display window will continue to count down.

Auto Weight Defrost


This feature allows you to defrost the foods by weight.
Weight must be programmed in pounds and ounces or in kilogrammes and tenths of a kilogramme.

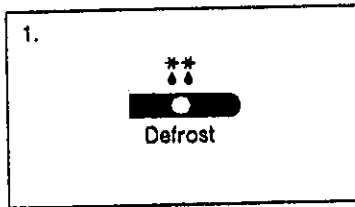

 1. **•Touch AUTO WEIGHT DEFROST Spot to select Defrost Category 1 through 4.**

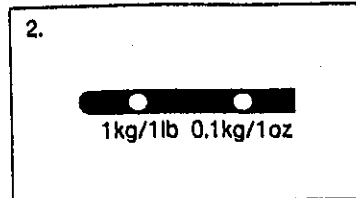

 2. **•Set the weight of your meat by pressing 1 kg/1 lb Spot and/or 0.1 kg/1 oz Spot.**

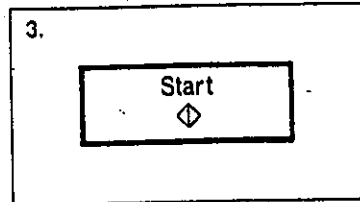

3. **•Touch START Pad.**


NOTES ON AUTO WEIGHT DEFROST:

- For model NN-6808/6858, follow only steps 2 and 3 as shown above.
- There are 4 categories for Auto Weight Defrost. Listed below are the recommended foods and maximum weight.
- The shape and size of the food will determine the maximum weight the oven can accommodate.
- Three stage cooking can be programmed including Auto Weight Defrost.
- For further information on Auto Weight Defrost refer to the Microwave Cookbook.


Category	Food	Number of Presses on DEFROST	Maximum Weight
1	Fish, Quiche	1	2 kg (5 lb)
2	Mince, Chops, Chicken portions, Diced meat	2	2 kg (5 lb)
3	Lamb joints, Whole Chicken, Whole Turkey	3	5 kg (11 lb)
4	Beef joints, Pork joints	4	4 kg (9 lb)

Auto Reheat (NN-6568/NN-6558)

 
This feature allows you to reheat 1 to 4 servings of foods without having to select cooking times and powers. The oven does it all automatically.

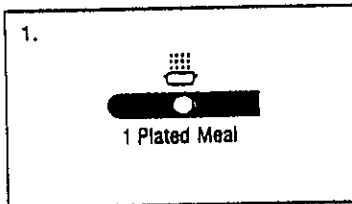

 1. **•Select desired Category.**

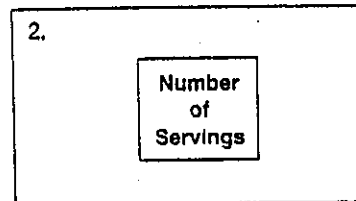

 2. **•Keep the pad depressed and the desired number of servings will appear in display window.**

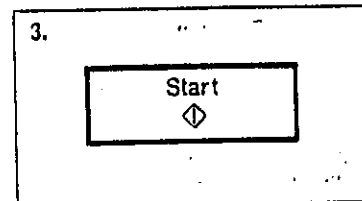

3. **•Touch START Pad.**

NOTES ON AUTO REHEAT:


- There are 3 categories for Auto Reheat. Listed below are the recommended foods and maximum weight category.
- The shape and size of the food will determine the maximum weight the oven can accommodate.
- Three stage cooking can be programmed including Auto Reheat.
- For further information on Auto Reheat, please refer to the Microwave Oven Cookbook.

Category	Food	Serving Number	Serving Size	Start Temperature
1	Plated Meal	1-4	225-750 g	
2	Soup/Stew	1-4	150-900 g	Refrigerated temperature
3	Hot Drinks	1-4	235-235x4 ml	


NB. Do Not use Hot Drinks Category for reheating Babies Bottles.

Auto Weight Cook (NN-6568/NN-6558)

 
This feature allows you to cook the foods by weight. Choose a cook category and program the weight of the food. Weight must be programmed in pounds and ounces or in kilogrammes and tenths of a kilogramme.

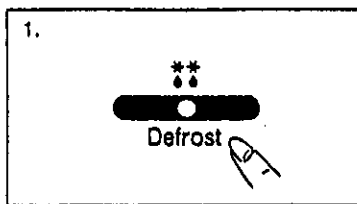

 1. Press AUTO WEIGHT COOK Spot to select Cook Category 1 to 8. Keep your fingers on the pad until the numbers you require is displayed.

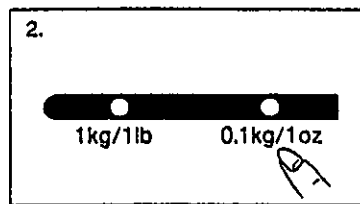

 2. Tap in the weight of your food in pounds and ounces or in kilogrammes and tenths of a kilogramme by pressing 1 kg/1 lb Spot and/or 0.1 kg/1 oz Spot.

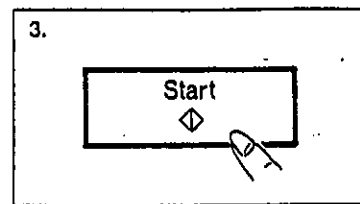

3. Touch START Pad.


NOTES ON AUTO WEIGHT COOK:

1. There are 8 categories for Auto Weight Cook. Listed below are the recommended foods and maximum weight.
2. The shape and size of the food will determine the maximum weight the oven can accommodate.
3. Three stage cooking can be programmed including Auto Weight Cook.
4. For further information on Auto Weight Cook refer to the Microwave Cookbook.


Category	Food	Number of Presses on Spot	Maximum Weight	Category	Food	Number of Presses on Spot	Maximum Weight
1	Vegetables, eg. Cauliflower, broccolt, courgettes etc.	1	2 kg (5 lb)	5	Beef joints eg. Topside, Rib, Sirloin— Medium done	5	3 kg (7 lb)
2	Root vegetables, eg. carrots, potatoes, swedes, turnips	1	2 kg (5 lb)	6	Beef joints— Well done	6	3 kg (7 lb)
3	Fish	3	2 kg (5 lb)	7	Lamb joints eg. Leg, Shoulders	7	3 kg (7 lb)
4	Whole chickens (for portions or breasts cook using power and time)	4	4 kg (9 lb)	8	Pork joints eg. Leg, Loin	8	3 kg (7 lb)

Auto Sensor Reheat (NN-6808/NN-6858)

 This feature allows you to reheat precooked foods as specified without having to select cooking times and powers. The oven does it automatically.

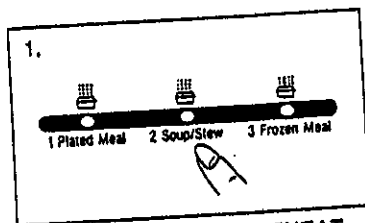

 1. Press AUTO SENSOR REHEAT Category Spot.

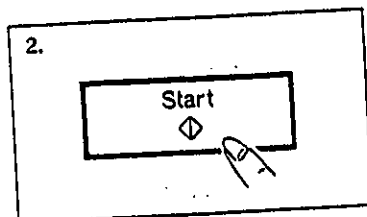

2. Touch START Pad.

NOTES ON AUTO SENSOR REHEAT:

1. Stand time or a power level can be programmed after Sensor Reheat.
 2. For further information on Auto Sensor Reheat refer to the Microwave Cookbook.
- For best results follow these recommendations:
- 1) Select correct category of food being reheated. All foods must be previously cooked.
 - 2) Make sure glass tray in the oven is dry to assure best cooking results.
 - 3) Foods should always be covered loosely, but completely with microwave cling film or lid*.
 - 4) All foods should have a covered stand time of 3 to 5 minutes.
 - 5) The surrounding room temperature should not be above 35°C. Inaccurate cooking may result.

DO NOT

 
- 1) Open oven door during reheat time. Opening door may cause inaccurate cooking results. The oven door may be opened once the timed countdown appears in display window.
 - 2) Reheat bread and pastry products. Use manual power and time.
 - 3) Cook or reheat raw or uncooked food.
 - 4) Use reheat if oven cavity is warm.
 - 5) Use reheat for beverages.
- *NB .Frozen meals must be covered with fresh microwave cling film (not freezer wrap.)

Auto Sensor Cooking (NN-6808/NN-6858)


Auto Sensor Cooking allows you to cook most of your favorite foods without having to select cooking times and powers. The oven does it all automatically.

For proper cooking results by Auto Sensor, be sure to cover dishes securely with cling-film or cook foods in suitable dishes with their own proper fitting lid.


For further information, please refer to the Microwave Oven Cookbook and Auto Sensor recipes.

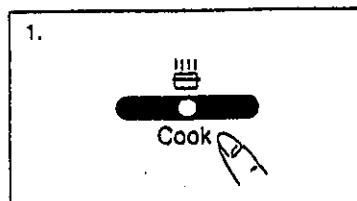

 1. Touch the AUTO SENSOR Cook Spot until the desired AUTO SENSOR CATEGORY NUMBER (A1-A12) appears in display window.

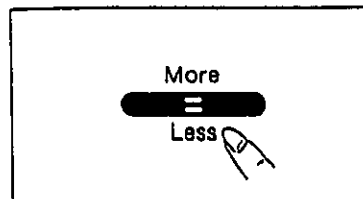

 • If desired, touch MORE or LESS Pad for your desired cooking result.

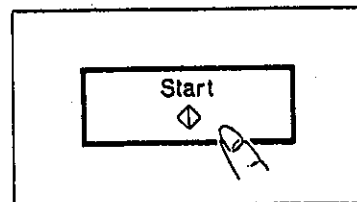

• Touch START Pad.

Adjust to taste controls:


Preferences for the degree to which food is cooked varies with each individual. After having cooked with the Auto Sensor a few times, you may decide you would prefer your food cooked either a little more a little less. By using the touch More or Less Control, the Auto Sensor programs can be adjusted to cook food for a longer or shorter time. If you are satisfied with the result of cooking with the Auto Sensor program, you do not have to use this pad.


NOTES ON AUTO SENSOR COOKING:

1. The Auto Sensor system works by detecting a build-up steam on the humidity sensor. As foods cook in a microwave oven, steam is produced. When foods are covered, the steam will build up and escape from the dish in a burst. This burst of steam is detected by the humidity sensor and then the oven automatically calculates the remaining cooking time.
2. When an Auto Sensor Category is selected, A1 to A12 will appear in the display window. The oven door should not be opened for longer than one minute when A1-A12 appears in the display window. Opening the door may cause inaccurate cooking results. Once the steam is detected, the remaining cooking time immediately appears in the display window and begins to count-down. At this time, the oven door may be opened to stir, turn or add foods.
3. Auto Sensor Cooking is successful with the foods and recipes found in the Genius Cookbook. Because of the vast differences in food composition, recipes and charts without the Auto Sensor symbol should be prepared in your microwave oven using the Power and Time features.
4. The room air temperature surrounding the oven should not be above 35°C when using Auto Sensor Cooking feature. Inaccurate cooking may result.
5. Foods less than 100 g (4 oz) should be cooked by power and time, not by the Auto Sensor.
6. When the remaining cooking time is over 60 minutes, the time will appear as hours and minutes.
7. All foods for Auto Sensor Cooking to cook are taken from their normal storage place.
8. Before using the Auto Sensor feature make sure Glass Tray in the oven is dry to assure best Auto Cooking results.
9. The appropriate food categories for each Auto Sensor Cycle are as follows.


Category	Fresh Foods	
	1:Vegetables 2:Root Veggies 3:Jacket Potatoes 4:Froz:Vegs/Fish 5:Quick Casserole 6:Lamb/Beef-Well	7:Beef-Med 8:Pork 9:Chicken 10:Chicken Pcs. 11:Fish 12:Stew

Operation for NN-6258

 
1. Open the door by pushing the door opener button. 

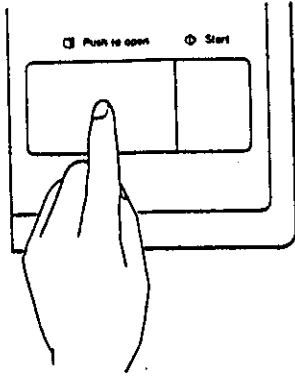

 
2. Place the food in a dish on the glass tray, and close the door.

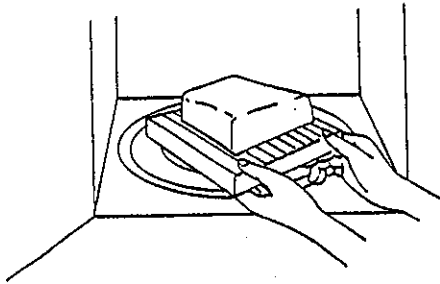

 3. Choose the cooking power by Power Select Control to desired setting.

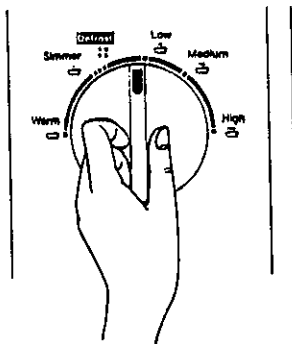


 4. Set the cooking time. (The oven light turns on.)

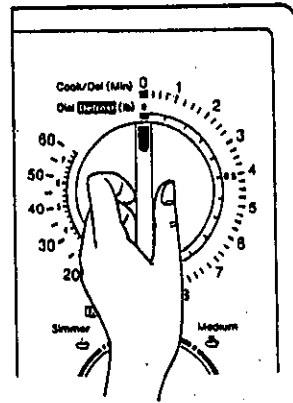

NOTE: When setting the timer less than 4 minutes, turn the timer past 4 minutes and then return to the correct of time.

 5. Push the start button. (The turntable rotates, and cooking starts.)

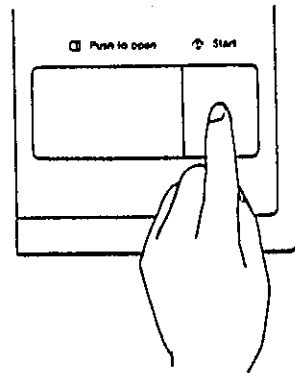

6. When the time has elapsed, the signal bell sounds and the oven turns off automatically. (The oven light goes off, and the turntable stops.) If the cooking time is interrupted by opening the door, the oven light stays on and the turntable stops. Push the start button again to restart the oven.

Care of Your Microwave Oven

1. Turn the oven off before cleaning.
2. Keep the inside of the oven, door seals and door seal areas clean. When food spatters or spilled liquids adhere to oven walls and door seals and door seal areas wipe off with a damp cloth. Mild detergent may be used if they get very dirty. The use of harsh detergent or abrasives is not recommended.
3. The outside oven surface should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. If the Control Panel becomes dirty, clean with a soft, dry cloth. Do not use harsh detergents or abrasives on Control Panel. When cleaning the Control Panel, leave the oven door open to prevent the oven from accidentally turning on. After cleaning touch STOP/CANCEL Pad to clear display window.
5. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity conditions and in no way indicates a malfunction of the unit.
6. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm soapy water or in a dishwasher.
7. The roller ring and oven cavity floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent and hot water then dry with a clean cloth. The roller ring may be washed in mild soapy water. Cooking vapours collect during repeated use but in no way affects the bottom surface or roller ring wheels. After removing the roller ring from cavity floor for cleaning, be sure to replace it in the proper position.

Questions and Answers

Q: I accidentally ran my microwave oven without any food in it. Is it damaged?

A: We do not recommend operating the microwave oven without any food. However, running the oven empty for a short time will not damage the oven.

Q: Why won't my oven turn on?

A: When the oven does not turn on, check the following:

1. Is the oven plugged in securely? Remove plug from outlet, wait 10 seconds and reinsert.
2. Check circuit breaker or fuse. Reset circuit breaker or replace fuse if it is tripped or blown.
3. If the circuit breaker or fuse is all right, plug another appliance into the outlet. If the other appliance works, there probably is a problem with the oven. If the other appliance does not work, there probably is a problem with the outlet.

Q: When I turn on my oven, there is noise coming from the glass tray.

A: This noise occurs when the roller ring and oven bottom are dirty. Frequent cleaning of these parts should eliminate or reduce the noise.

Q: My microwave oven causes interference with my TV. Is this normal?

A: Some radio and TV interference might occur when you cook with the microwave oven. This interference is similar to the interference caused by small appliances such as mixers, vacuums, blow dryers, etc. It does not indicate a problem with your oven.

Q: The oven won't accept my program. Why?

A: The oven is designed not to accept an incorrect program. For example, the oven will not accept a fourth stage, and will not accept Weight Defrost after Auto start.

Q: Why does my oven light dim?

A: When cooking with a power other than HIGH, the oven must cycle to obtain the lower power levels. The oven light dims and clicking noises can be heard when the oven cycles.

Q: Sometimes warm air comes from the oven vents. Why?

A: The heat given off from the cooking food warms the air in the oven cavity. This warmed air is carried out of the oven by the air flow pattern in the oven. There are no microwaves in the air. The oven vents should never be blocked during cooking.

Technical Specifications

Power Source: 240 V, 50 Hz
Required Power: 1400 W, 6.0 A
Output Power: 700 W

Outer Dimensions: 555 mm (W) × 431 mm (D) × 306 mm (H)
Oven Dimensions: 372 mm (W) × 385 mm (D) × 209 mm (H)
Weight: 17 kg

Weight and Dimensions shown are approximate.

Matsushita Electric Industrial Co., Ltd.
Central P.O. Box, Osaka 530-91, Japan.

A00034760BP
Printed in Japan